



WORKPRO

Wood door stops

Half dome floor bumpers are a simple and easy way to protect your walls from damage caused by doorknobs, levers and other door hardware. These floor stops are designed to stop low swinging doors from damaging adjacent walls and furnishings.



2 DIFFERENT STYLES:

Choose between the magnetic stop that mounts with adhesive tape or the rubber bumper stop that mounts with a screw/anchor or adhesive tape.

SOLID WOOD CONSTRUCTION:

Choose between oak, beech or sapelly.

STOP POTENTIAL DAMAGE:

These floor stops are designed to stop low swinging doors from damaging adjacent walls and furnishings.

SIMPLE D.I.Y. INSTALLATION:

Fast and easy to install, all necessary fasteners included.

PRIME-LINE




(800) 255-3505

Rubber Bumper (Pack of 2)

W133316 (Beech)

W133317 (Sapelly)

W133318 (Oak)

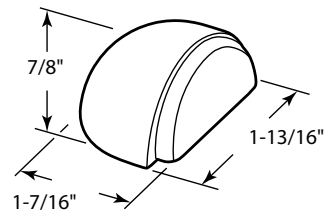

W133316



W133317




W133318

Magnetic (Pack of 2)

W133319 (Beech)

W133320 (Sapelly)

W133321 (Oak)

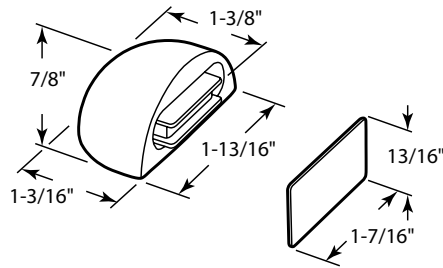

W133319



W133320



W133321

primeline.net